




# FLiNaK Salt

Produced by  
Copenhagen Atomics

# FLiNaK Salt Highlights

---

- ✔ Ships in purified salt quality
- ✔ Ships in volumes of 1 kg, 50 kg and ton scale
- ✔ Pre-mixed and pre-melted pellets or tanks
- ✔ Less impurity from moisture, oxides and metal traces
- ✔ 10 times less moisture uptake compared to powder
- ✔ Significantly less corrosion



# The molten salts

## Introduction

---

### Optimized for High-Temperature Applications

Traditionally commercially available FLiNaK salt comes in powder form and needs to be mixed to the eutectic composition, while often containing a large and variable amount of moisture, oxide and metal contaminants.


Therefore, Copenhagen Atomics has developed a high purity grade of FLiNaK salt commercially available. The control of these impurities and pre-mixed product enable research groups and companies using molten salt to obtain more reliable and consistent data and less corrosion in processes employing molten salts.

---

#### Purified salt

FLiNaK undergoes a time consuming purification process to drive out moisture and oxygen from the salt. Purified salt is available in large quantities, intended for large testing requirements or molten salt processes in operation.

Reference	Oxides level	Metals level
High purified	< 100 ppm	< 400 ppm




# Specifications



## FLiNaK Salt Specifications

Reference	FLiNaK Eutectic mixture of LiF, NaF and KF
High purified	7789-24-4 (LiF) 7681-49-4 (NaF) 7789-23-3 (KF)
Formula	46.5 LiF – 11.5 NaF – 42.0 KF mol% 29.2 LiF – 11.7 NaF – 59.1 KF wt%
Appearance	Solid white
Melting/boiling point	454 °C / 1570 °C
Density (melt)	$\rho(T) = 2729.3 - 0.73 \cdot T$ (kg·m <sup>-3</sup> ) [1]
Viscosity (melt)	$\mu(T) = 4.0 \cdot 10^{-4} \exp(4170 / T)$ (Pa · s) [2]
Heat Capacity (melt)	$c_p = 976.78 + 1.0634 \cdot T$ (J·kg <sup>-1</sup> ·K <sup>-1</sup> ) [1]
Identified use	Lab/industry chemical
Storage	Store in an inert atmosphere or vacuum
H.S. Code	2826.19.00



# Corrosion and Impurities

Copenhagen Atomics has significantly increased the accuracy of measuring impurity in FLiNaK salt, by 10% or more. Metal impurity is measured through ICP OES and oxide impurity through electrochemical techniques.

See the oxide and metal contaminant level in different grade salts in the figure on the right.

Increased accuracy of impurity measurement, leads to increased accuracy of measuring corrosion, as corrosion scales with increased moisture, oxide and metal content.

Corrosion rate decreases substantially with FLiNaK salt produced by Copenhagen Atomics.

Corrosion rate induced by Copenhagen Atomics' purified salt is less than 0.01 mm/y\*.

Corrosion rate induced by commercially available FLiNaK powder is more than 1 mm/year\*.


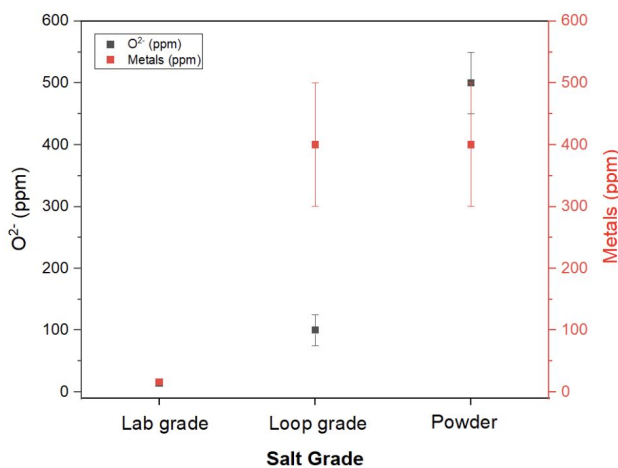


Table of typical impurities

Z	Element	Impurities (ppm)
8	Oxygen (O)	25–90
13	Aluminium (Al)	1–10
14	Silicon (Si)	1–5
24	Chrome (Cr)	5–80
25	Manganese (Mn)	1–5
26	Iron (Fe)	10–40
27	Cobalt (Co)	0–1
28	Nickel (Ni)	0–3
29	Copper (Cu)	0–1
30	Zinc (Zn)	0–1
39	Yttrium (Y)	0–1
40	Zirconium (Zr)	unspecified
41	Niobium (Nb)	0–1
42	Molybdenum (Mo)	1–4
	others	2–20
=	Total	50–200

\*Corrosion rate in stainless steel 316L at 550 °C in static experiments without galvanic effects.




# Advantages

Copenhagen Atomics purified salts ships in ingots and canisters.

There is around 10 times the amount of moisture uptake in the powdered salt compared to the ingot at each time interval, when exposing the FLiNaK salt to air measuring the increase in the mass.

It is challenging to ship and handle salts in powder form without introducing moisture. The handling alone will introduce a large amount of moisture that will potentially result in 5 - 10 times more corrosion of steel.

As the use of Copenhagen Atomics' FLiNaK salts will result in significantly less corrosion if handled correctly\*, it would be more cost effective to use purified salts from Copenhagen Atomics and stainless steel 316 instead of powder-based salts and more expensive steels, such as Hastelloy N.

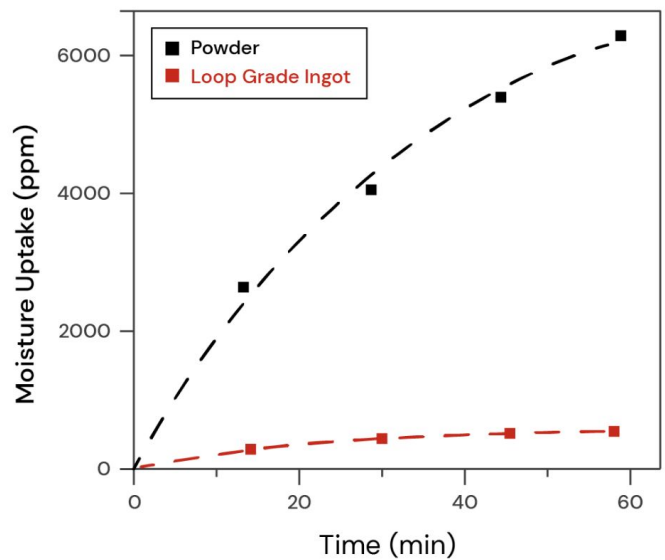


Un-refined FLiNaK powder	Copenhagen Atomics Salt
Mixing: Time and labour-demanding	Already pre-mixed
Powder form: Dust, loss of material, contamination and electrostatic phenomena	Tanks/ingot/pellet form: Minimum loss of material, minimum dust formation
Hygroscopicity: High specific surface area	Hygroscopicity: Reduced specific surface area
Impurities: Uncontrolled amounts of oxides, moisture and metal traces	Impurities: Minimum moisture, oxides and metal traces


\*Copenhagen Atomics will provide guidelines on how to handle the salt in order to minimize the oxygen content in your system during loading and operation.

## References

1. Williams, D. F. (2006). "Assessment of Candidate Molten Salt Coolants for the NGNP/NHI Heat- Transfer Loop," Oak Ridge National Laboratory Report ORNL/TM-2006/69.
2. Ambrosek, J., Anderson, M., Sridharan, K., and Allen, T. (2009). "Current Status of Knowledge of the Fluoride Salt (FLiNaK) Heat Transfer," Nuclear Technology, 165(2), 166-173.



# Contact Copenhagen Atomics

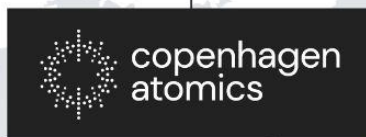

[sales@copenhagenatomics.com](mailto:sales@copenhagenatomics.com)  
[copenhagenatomics.com](http://copenhagenatomics.com)



Copenhagen Atomics A/S  
Oliefabriksvej 77  
2770 Kastrup  
Denmark

Copenhagen Atomics reserves the right to change or update information and values of this datasheet at any time without prior notice. Please inquire for the current version.

